

This universal remote control is compatible with most television sets controlled by infra-red.

This remote control was programmed in the factory, so that you can use it to control most of the sets of the THOMSON group's make. For this reason, we recommend that prior to attempting to programme the remote control, you try it out by means of one of the methods described in this user manual. However, first of all, you must install 2 batteries (AAA) in the remote control.

Please keep this guide along with the code list (provided separately), so that you can subsequently programme your remote control for use with other sets.

The keys

- 1 Indicator light: the red indicator light is lit whenever a key is pressed.
- 2 On/Standby or Standby only, depending on the equipment being used.
- 3 Zapping and volume control.
- 4 Mute.
- 5 Return to channel 1.
- 6 "Info" key.
- 7 External TV/VIDEO sources (AV connectors).

Note: depending on the actual devices, manufacturers and year of manufacture, the functions available will vary.

Code entry

Direct code input

To directly input the code read from the list:

1. Switch your TV set on.
2. On page II of the separate code list enclosed, find the codes matching the make of the TV set which you want to control.
3. Hold down keys **◀** and **⏻** until the red indicator lamp remains lit.
4. While the indicator lamp is on, with the keys **PROG+** (1st number), **PROG-** (2nd number), **VOL+** (3rd number), and **VOL-** (4th number), enter the 4-digit code.
*EXAMPLE: To enter code 0027, do not press the keys **PROG+** and **PROG-**, press **VOL+** twice and **VOL-** seven times. The red indicator lamp flashes whenever a key is pressed.*
5. To save the code, press key **▶**. The red indicator lamp goes off.
Should the code entered not be on the list, the red indicator lamp flashes rapidly during 3 seconds and then goes off.
6. Code check: Direct the remote control towards the TV set and try to switch it over to standby by simply pressing the key **⏻**.

Automatic code retrieval

1. Switch your TV set on.
2. Hold down keys **◀** and **⏻** until the red indicator lamp remains lit.
3. Direct the remote control towards the TV set and try to switch it off by simply pressing the key **⏻**. Should the set not switch off, press **⏻** as many times as required (up to 200 times), until the set switches off. Between two subsequent key depressions, give the red indicator lamp enough time to extinguish and light up again (about 1 second). Proceeding this way will enable you to see whether the set responds or not.
4. Immediately after the TV set switches over to standby, press key **▶** to store the programming. The red indicator lamp goes off.

Retrieval of the code stored in your remote control

To retrieve the code stored in your remote control:

1. Hold down keys **◀** and **⏻** until the red indicator lamp remains lit.
2. Press key **VOL-**.
3. To visualise the first code digit, press **PROG+** and count the flash pulses of the red indicator lamp. The digit "0" does not generate any flash pulse.
4. For the second code digit, press key **PROG-** and count the flash pulses of the red indicator lamp.
5. For the third code digit, press key **VOL+** and count the flash pulses of the red indicator lamp.
6. For the fourth code digit, press key **VOL-** and count the flash pulses of the red indicator lamp. The indicator lamp extinguishes after the last flash.

When you have retrieved the code of your set, jot it down so that you can use it whenever needed.

After battery replacement, you'll have to programme the remote control again.



This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste • The European Union has implemented a specific collection and recycling system for which producers are responsible • This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused • Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way • Consequently, please do not throw out your inoperative appliance with the household waste • If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance • If you are a professional user, please follow your supplier's instructions • If the appliance is rented to you or left in your care, please contact your service provider • Help us protect the environment in which we live !

THOMSON HELPLINE

You can contact THOMSON by dialling:

0871 500 0520
(call to this number
will be charged at 10 pence per minute)

<http://www.thomsonlink.com>