

max. Laminierbreite	max. Laminierhöhe	Laminiergeschwindigkeit 50 Hz	60 Hz	Laminier- temperatur
238 mm	125 mic	270mm/Min.	320mm/Min.	105°C

### Notes on Safety:


Please read this manual carefully before use and follow the instructions below:

1. Do not use this unit outdoors.
2. Do not throw it on the ground heavily otherwise the outer shell will be broken causing dangers of electric shock. Should there be any above-mentioned situation, please unplug in order to avoid electric shock.
3. Please do not allow children to use this unit in order to avoid dangers.
4. Please do not disassemble this unit by yourself as to avoid dangers of electric shock.
5. Please do not place this unit where it is humid and wet. Please do not rub this unit with wet cloth.
6. Use the laminator only by watching it!
7. Do not covering the laminator (ventilation slits), because of overheating!

### Methods of Use of the Laminating Machine


1. Please install the back directing pad on to the unit as instructed, and take notice of the exit of the laminating machine to make sure there is no object obstructing its path/exit. Please also preserve a space for the exit for the laminated item.
2. Insert the power plug into a socket with specification suitable for this unit.
3. Please turn on the switch on the upper right corner to "—" downwards. The power indicator is on, and the laminating machine is now heating up.
4. The warm-up phase lasts about 10 minutes. The blinking green LED will stop blinking and instead will light continuously, accompanied by an audio signal, to indicate the end of the warm-up phase. For a higher laminating capacity (especially for larger quantities), let the machine warm up for an additional 5 minutes.

**NOTE: Total thickness to be laminated is 0.5 mm and max, width is 238 mm**

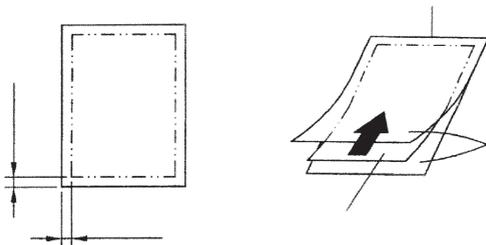

5. Leave at least 3-5 mm space at the edges when inserting the item into the laminating pouch film. Make sure there is no oblique insertion. Send the sealed side of the laminating pouch film into the entrance of laminating machine.

6. Wait until the laminate has passed completely through the machine before removing it. Once it has passed completely through, remove the laminate quickly to avoid over-heating of the end.

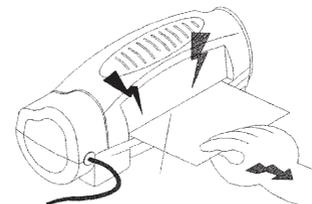

### Notes on the Use of the Laminating Machine

1. If better laminating effect is desired, please allow further 10-20 minutes after the ready indicator is on, in order to obtain better laminating quality.
2. Please do not only roll the laminating pouch film into the machine. It is forbidden to use laminating pouch film single-sided. This is to prevent laminating pouch film to be rolled into the laminator.
3. Please make sure that the total thickness to be laminated is not more than 0.5 mm. Please do not enter the laminating pouch obliquely in order to avoid the pouch film being stuck during lamination.
4. Please disconnect the power plug when the unit is not in use for a long time.
5. Please send the unit to the appointed local distributor for repair, if there are any misuses of laminating machine, resulting in the roll-in of laminating pouch film.

### Cleaning & Maintenance of the Laminating Machine

#### Cleaning of the Roller

Should the laminating machine be used for a period, the rollers will be left with pouch film additives that stuck on the laminating pouch film. This is one reason that the laminating pouch will be rolled into the roller. Therefore, please clean the roller periodically. Allow it to pass through the machine about 10 times once the machine has been turned on and has been warm for roughly 30 minutes.

#### Cleaning of the Machine itself

1. Unplug the power supply cord before cleaning the unit!
2. Please wipe with soft cloth.
3. When necessary, wipe with neutral cleaning agent and rub it off with clean cloth.

max. Laminierbreite	max. Laminierhöhe	Laminiergeschwindigkeit		Laminier-Temperatur
		50 Hz	60 Hz	
238 mm	0,5 mm	195mm/Min.	230mm/Min.	105° C

## Sicherheitshinweise:


Bitte lesen Sie die Bedienungsanleitung sorgfältig bevor Sie das Gerät in Betrieb nehmen und befolgen Sie die nachstehenden Punkte:

1. Das Gerät nicht ausserhalb von Gebäuden benutzen.
2. Wenn das Gerät heruntergefallen ist kann es durch Brechen des Gehäuses die Gefahr eines Stromschlages geben. Bitte ziehen sie gleich den Stromstecker, bzw. benutzen Sie das Gerät in einem solchen Fall nicht mehr!
3. Bitte das Gerät vor der Benutzung durch Kinder schützen!
4. Keine Selbst-Reparaturen durchführen!
5. Das Gerät nicht in feuchter oder nasser Umgebung verwenden, auch nicht feucht abwischen!
6. Das Gerät nur unter Beaufsichtigung betreiben!
7. Das Gerät darf nicht abgedeckt werden (Lüftungsschlitze!), Gefahr der Überhitzung!

## Vorbereitung / Aufstellung des Gerätes:


1. Hängen Sie die Ausgabeeauflage hinten in die vorgesehenen Schlitze an dem Gerät ein. Achten Sie darauf, dass Sie hinter dem Gerät entsprechend Platz freihalten beim Aufstellen.
2. Verbinden sie das Netzkabel des Gerätes mit einer Steckdose.
3. Schalten Sie das Gerät ein indem Sie den Schalter auf "I" kippen. Die Power-LED leuchtet rot auf und der Aufheizvorgang beginnt.
4. Die Aufwärmphase dauert etwa 10 Minuten. Das Ende ist ersichtlich, wenn die grüne LED nicht mehr blinkt, sondern andauernd brennt und ein Audiosignal zu hören ist. Für eine höhere Laminierleistung (vor allem bei größeren Mengen) lassen Sie das Gerät noch zusätzlich 5 Minuten aufheizen.

**NOTE:** Das zu laminierende Objekt darf nicht dicker wie 0,5 mm und breiter als 238 mm sein!

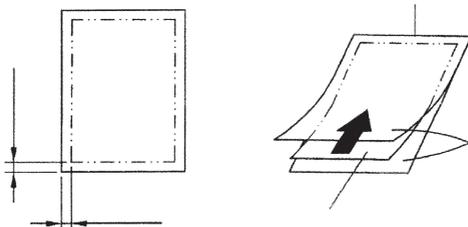

5. Lassen Sie ca. 3-5 mm Freiraum zu den Ecken der Laminiertasche. Vergewissern Sie sich, dass kein Schmutz in die Laminiertasche gelangt ist. Geben Sie das Laminat mit der versiegelten Seite zuerst in das Laminiergerät.

6. Warten Sie bis das Laminat gänzlich durch das Gerät gelaufen ist, ehe Sie es ihm entnehmen. Entfernen Sie es dann baldmöglichst, dass das Ende nicht überhitzt wird, sobald es gänzlich durchgelaufen ist.

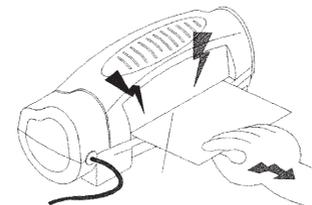

## Anmerkungen zur Verwendung des Laminiergerätes

1. Wenn ein höherer Laminierschutz gewünscht wird, lassen Sie das Gerät noch weitere 10-20 Minuten nachdem die grüne LED auf leuchten umgeschaltet ist aufwärmen.
2. Lassen Sie nie eine leere Laminiertasche durch das Gerät laufen! Schieben Sie eine Tasche niemals aufgefallen in das Gerät ein, da sich diese ansonsten in dem Gerät verschweißen kann und dieses dann unbrauchbar wird!
3. Bitte stellen Sie sicher, dass das zu laminierende Objekt nicht höher als 0,5 mm ist! Schieben Sie das Laminat nicht schräg in das Gerät ein!
4. Bitte ziehen Sie den Netzstecker, wenn das Gerät längere Zeit nicht in Gebrauch ist!
5. Führen Sie keine eigenständigen Reparaturen an dem Gerät durch, konsultieren Sie hierfür einen Fachhändler!

## Säubern & Instandhaltung des Laminiergerätes

### Säubern der Rollen

Mit der Zeit können die Rollen des Laminiergerätes durch Staub, Dreck, etc. verschmutzt werden und somit kann ein einwandfreier Transport nicht mehr gewährleistet werden. Bitte reinigen Sie daher die Rollen regelmäßig. Nehmen Sie hierzu ein weißes Blatt Kopierpapier und falten es in der Mitte. Lassen Sie dieses ca. 10 Mal durch das Gerät laufen, wenn dieses eingeschaltet und ca. 30 Minuten aufgeheizt ist.

### Säubern des Gerätes

1. Bitte nur mit trockenen, weichen Tüchern säubern!
2. Wenn unbedingt notwendig wischen Sie das Gerät mit einem neutralen Reiniger und trocknen es anschließend sorgfältig ab. Bitte achten Sie dabei darauf, dass keine Flüssigkeit in das Gerät läuft!