

We are so happy you chose a
hama product.

Enjoy using it!




hama

00
220844

Quick Installation Guide

Required tools

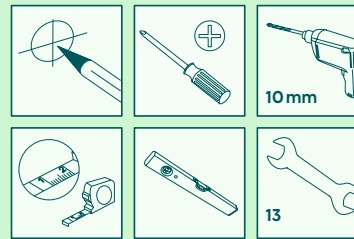

Installation kit

A1		8x60 (x8)	C2		M6x20 (x4)
A2		Ø10x60 (x8)	D1		M8x12 (x4)
A3		M8 (x8)	D2		M8x20 (x4)
B1		M6 (x4)	D3		M8x30 (x4)
B2		Ø8x10 (x4)	D4		M8x50 (x4)
B3		Ø8x20 (x4)	E1		(x1)
C1		M6x12 (x4)			



1 Drilling the holes

2 Wall mounting the bracket

3 Mounting on backside of the TV

Flat TV backside

C1, D1, D4 + B1

Curved TV backside

C2, D2, D4 + B1 + B2

D3, D4 + B3

★ You do not need a washer for the D-screws

4 Adjustment & Fixing

5 Adjustment & Fixing

Do you need more help?



Scan QR or visit: www.hama.com
 00220844 Downloads

